

4.3 DMX channel values

Channel	Value	Function
1	0-255	Pan Pan movement 0~540
2	0-255	Tilt Tilt movement 0~180
3	0-255	Pan Tilt speed Pan & Tilt speed adjustment
4	0-255	Red 0-100% Blue
5	0-255	Green 0-100% Blue
6	0-255	Blue 0-100% Blue
7	0-15 16-31 32-47 48-63 64-79 80-95 96-111 112-255	Color Change Neutral Red Green Blue Green/blue Red/Green Red/Blue Red/Green/Blue
8	0-10 11-20 21-30 31-200 201-250 251-255	Switching the LEDs/Strobe/Reset LED OFF Neutral Reset Strobe-effect with increasing speed Random strobe-effect Neutral
9	0-255	Dimmer 0-100% Dimmer
10	0-255	Pan Fine Pan fine
11	0-255	Tilt Fine Pan fine
12	0-127 128-191 192-255	No function Sound mode 2 (strobe) Sound mode 1 (fixed led)